

MERCEDES CR

CLIXE Emulator Instruction Manual

IMMO OFF PROGRAM



Table of contents

Page 2	Program introduction
Page 3	• Bosch PMS
Page 4	• Lucas ED 0012
Page 5	• Siemens PMS



● Program introduction



Program usage

This program can be used with the following ECUs:

Bosch PMS
ED 0012
Siemens PMS



Example ECUs

Bosch

0 261 200 614 / 018 545 11 32

Lucas

R 04010009 A R 04010009 B R 04010009 D

Siemens

021 545 39 32 020 545 65 32 018 545 41 32



Example cars

MERCEDES

C-class (W202) E-class (W210) Vito (W638)

● Bosch PMS



Attention!

- This solution works only if your car is equipped with:
 - an infrared immo box
 - with a 12-pin module and 2-pin CAN (there is no CAN-H, only CAN-L).
 - green and red LEDs blink on the door handle and in the rear-view mirror.



1

Connect Emulator to the 12-pin immo box

GND - 2pin

ACC - 7pin

CODE - 5pin




Attention!

- Cut off pin 5 and 6 in immo box.
The green and red LEDs will no longer blink.

End of the procedure

Lucas ED 0012


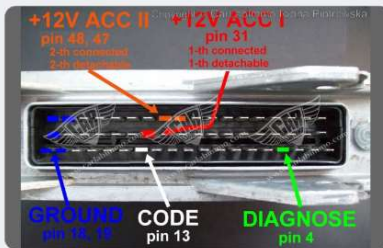


Attention!

- This solution works only if your car is equipped with:
 - an infrared immo box
 - with a 12-pin module and 2-pin CAN (there is no CAN-H, only CAN-L).
 - green and red LEDs blink on the door handle and in the rear-view mirror.

1

Connect Julie Emulator to the ECU according to the pictures on the right

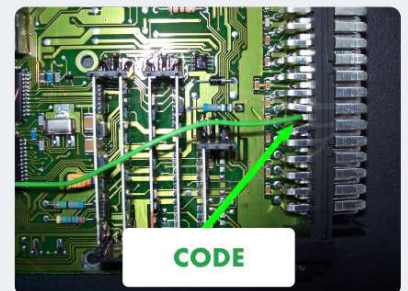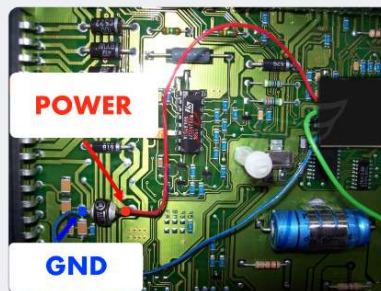

Attention!

- Cut off pin 13 in the ECU and pins 5 and 6 in the immo module. The green and red LEDs will no longer blink.

● Siemens PMS



i Attention!

- This solution works only if your car is equipped with:
 - an infrared immo box
 - with a 12-pin module and 2-pin CAN (there is no CAN-H, only CAN-L).
 - green and red LEDs blink on the door handle and in the rear-view mirror.

1

Connect the emulator to the immo box

GND - 2pin
ACC - 7pin
CODE - 5pin

i Attention!

- Cut off pin 5 and 6 in immo box.
 The green and red LEDs will no longer blink.

End of the procedure