

MAZDA 1

CLIXE Emulator Instruction Manual

IMMO OFF PROGRAM
FOR CARS WITH **LUCAS 34AS** OR **mitsubishi BJ3Dxxx**
IMMOBILISER BOX



Table of contents

Page 2	· Program introduction
Page 3	· Denso FP87 ECU
Page 4	· Denso RF4F ECU
Page 5	· Denso RF3R ECU
<hr/>	
Page 6	· Example cars and ECUs full list



● Program introduction



Program usage

DENSO ECUs with LUCAS 34AS immobiliser box.
DENSO ECUs with Mitsubishi BJ3Dxxx immobiliser box.



Example ECUs (Full list on page 6)

Denso

B6MM B5F3 B5E1 B34S B34P B33L BP6J BP5C FP88 FP87 RF4S RF4D RF4F RF3F
RF3R RF2A FP88 ZL13 ZLO5 ZM39



Example cars (Full list on page 6)

Mazda

Demio MX-5 Premacy 6 323 323F 626



Denso FP87 ECU



ECU



Immo box

1

Find **93C56** EEPROM memory and unsolder it



2

Using the programmer, change the following values in memory content:

- 017 — 33
- 019 — 33
- 01B — 33
- 01D — 33




3

Connect **Clixe™ Emulator** to the ECU according to the pictures on the right

Attention!

- Disconnect immo box!
- If you have trouble connecting the emulator to the ECU, you may try another method, described on page —6

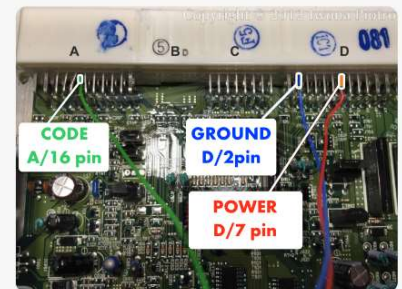

End of the procedure

● **Denso RF4F ECU**



ECU



Immo box

1

Find **93C56** EEPROM memory and unsolder it



2

Using the programmer, change the following values in memory content:

016 to 019 ——— 33 33 33 33





3

Connect **Clixe™ Emulator** to the ECU according to the pictures on the right

i Attention!

- Disconnect immo box!
- If you have trouble connecting the emulator to the ECU, you may try another method, described on page - 6

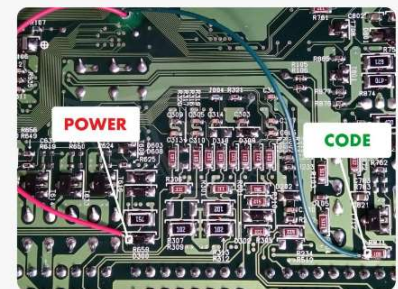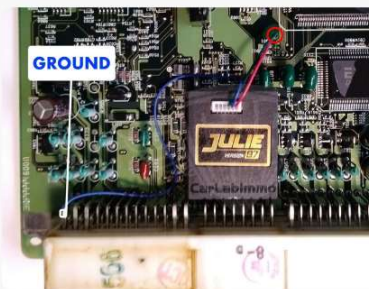

End of the procedure

● **Denso RF3R ECU**



ECU



Immo box

1


Find **93C56** EEPROM memory and unsolder it



2

Using the programmer, change the following values in memory content:

016 to 019 ——— 33 33 33 33

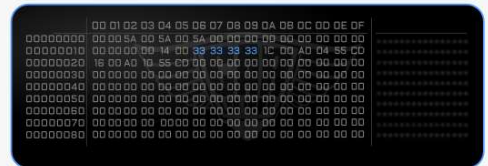


3

Connect **Clix**™ Emulator to the ECU according to the pictures on the right



Attention!

- Disconnect immo box!
- If you have trouble connecting the emulator to the ECU, you may try another method, described on page - 6

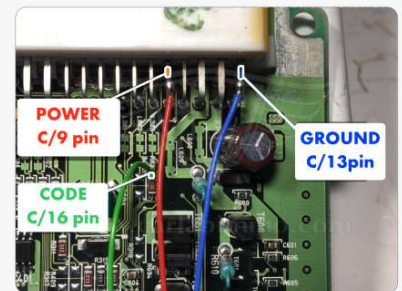

End of the procedure

● Example cars and ECUs



Program usage



Example cars



Example ECUs

DENSO

Denso

FP87

Page 3

Mazda Premacy 1.8 16V 114HP 1999-2005

FP87 18 881B (Mazda Premacy 1.8 16V 114HP 2001)

Denso

RF4F

Page 4

Mazda 626 2.0 DiTD 110HP 1997-2002

RF4F 18 881C (Mazda 626 2.0 DiTD 110HP 1999)

Denso

RF3R

Page 5

Mazda Premacy 2.0 DiTD 101HP 1999-2005

RF3R 18 881A (Mazda 626 2.0 diesel 2001)

OTHER ECUs

Denso

Mazda 626 2.0 DiTD 110HP 1997-2002
 Mazda 323 2.0 DiTD 101HP 1998-2003
 Mazda 323 1.5 88HP 1998-2003
 Mazda 323F 2.0 DiTD 90HP 1998-2003
 Mazda 323F 1.6 98HP 1998-2003
 Mazda 323F 1.5 88HP 1998-2003
 Mazda Demio 1.5 75HP 1996-2002
 Mazda Demio 1.3 63HP 1996-2002
 Mazda MX5 1.8 140HP 1998-2005
 Mazda MX5 1.8 131HP 1998-2005
 Mazda MX5 1.6 110HP 1998-2005
 Mazda Premacy 1.8 114HP 1999-2005
 Mazda Premacy 1.8 100HP 1999-2005

B6MM 18 881A (Mazda MX5 1.6 110HP 2001)
 B5F3 18 881C (Mazda Demio 1.5 75HP 2000)
 B5E1 18 881B (Mazda Demio 1.5 103HP 2004)
 B35B 18 881C (Mazda Demio 1.3 63HP 2000)
 B34S 18 881C (Mazda Demio 1.3 63HP 1999)
 B34P 18 881C (Mazda Demio 1.5 75HP 2000)
 B33L 18 881A (Mazda Demio 1.3 63HP 1998)
 BP6J 18 881C (Mazda MX5 1.8 140HP 2000)
 BP5C 18 881A (Mazda MX5 1.8 131HP 1999)
 FP88 18 881B (Mazda Premacy 1.8 100HP 2002)
 RF4S 18 881B (Mazda 323 2.0 DiTD 101HP 2000)
 RF4D 18 881 (Mazda 323F 2.0 DiTD 90HP 2001)
 RF3F 18 881C (Mazda 323 2.0 DiTD 101HP 1998)
 RF2A 18 881D (Mazda 626 2.0 DiTD 110HP 2000)
 ZL13 18 881A (Mazda 323 1.5 88HP 1999)
 ZL05 18 881A (Mazda 323F 1.5 88HP 2000)
 ZM39 18 881C (Mazda 323F 1.6 98HP 2002)

Methods of connecting the Clixe™ emulator to the immo box plug (in case of problems with connecting the emulator to the ECU)

Method 1



Method 2

